
SWEEOER OPERATOR MANUAL

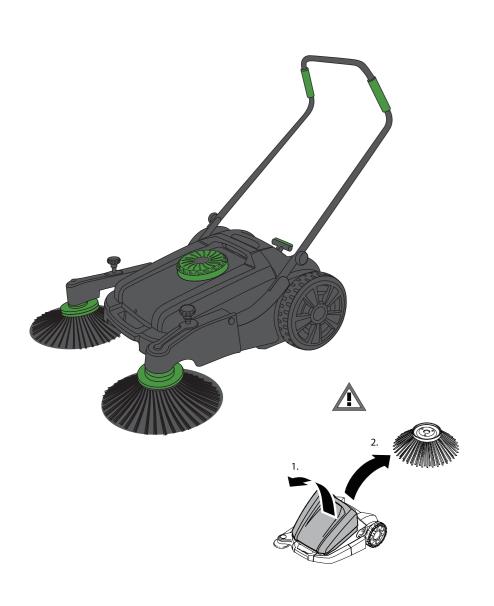

SWEEPER OPERATOR MANUAL

Proper use

This sweeper has been designed to sweep dirt and debris from outdoor sur-This appliance is designed for domestic

use only.

Owner/User Responsibility The owner and/or user must have an unhandle.

derstanding of the manufacturer's operating instructions and warnings before

See page 3. using this pressure washer. Warning information should be emphasized and understood.

If the operator is not fluent in English, See page 3. the manufacturer's instructions and warnings shall be read to and discussed with the operator in the operator's native language by the purchaser/owner, making sure that the operator comprehends its contents.

Owner and/or user must study and maintain for future reference the manu- with original accessories and spare facturers' instructions. For household use only!

Assembly

See page 2.

Operation

Risk of being squeezed or hurt at the belts, side-brushes, containers, pushing

Storing the appliance

Maintenance

Spare parts

The appliance may only be equipped At the end of the operating instructions

you will find a selected list of spare parts that are often required. For additional information about spare parts, please go to the Service section at

www.kaercher.com.

IMPORTANT SAFETY INSTRUCTIONS

- The machine may not be used or This device is not intended for use by stored in hazardous areas. It is not allowed to use the appliance in hazardous locations.
- The machine with working equipment must be checked to ensure that it is in proper working order and is operating safely prior to use. Otherwise, the appliance must not be
- The appliance is not suitable for sweeping off hazardous substances.
- The appliance is not suitable for sweeping off liquids.
- Please do not sweep away any burning substances such as cigarettes, match sticks or similar objects.
- Please wear safety gloves while removing glass, metal or other materials from the waste container.
- Never sweep off explosive liquids, combustible gases or undiluted acids and solvents. This includes petrol, paint thinner or heating oil which can generate explosive fumes or mixtures upon contact with the air. Acetone, undiluted acids and solvents must also be avoided as they can harm the materials on the machine.
- The operator must use the appliance properly. He must consider the local conditions and must pay attention to third parties, in particular children, when working with the appliance.

Sealing Strip

4.Sponge

5.Screw


7.Handle


Sponge Cover

6.Screw ST4.8X16


persons (including children) with reduced physical, sensory or mental abilities or lacking experience and/or knowledge, unless they are supervised by a person responsible for their safety or are instructed by these persons on the use of the device. Children should be supervised, to ensure that they do not play with the

> SAVE THESE **INSTRUCTIONS!**

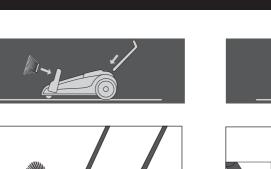

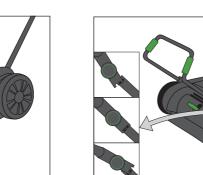


Front Brush Tighted With Three Screws

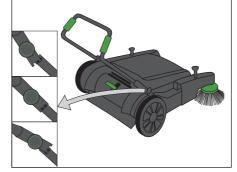


Handle Desinged With Three Angle Adjustments



Front Brush Adjust Knob Turn"+" to Low Front Brush Turn"-" to Rise Front Brush

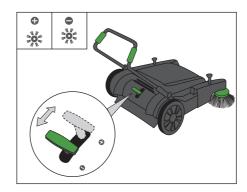


Main Brush Height Adjust Handle Pull "+" Direction to Low Main Brush Push"-"Direction to Rise Main Brush

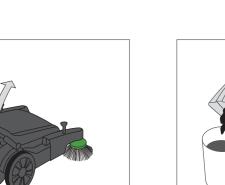

Hold The Handle And Lift Up To Disassemble The Garbage

When Move Backward, Make Sure The


Step Height No More Than 19Cm

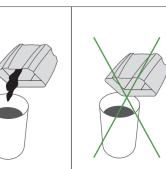


The Sweeping Groud Height Difference


Should Within 2.5Cm

 Along The Side Of Avoid Jogging Garbage To Emptying TheGarbage



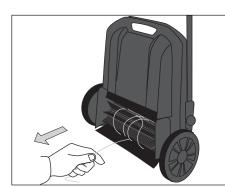


Reverse The Main Brush To Take Out The Trash When Twined

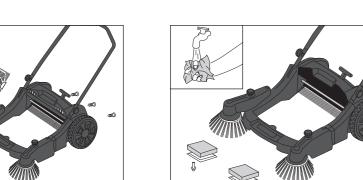


The Main Brush


Assebmle And Disassemble Main Brush Main Brush Consist Of Two Parts, Each Tighted With Three Screws

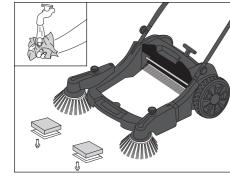


Assemble Dust Guard Plate Down Sides


Clear The Exhaust Holes Sponges

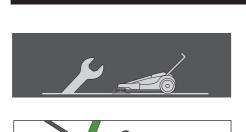

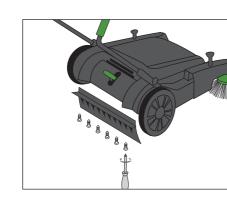


The Main Brush Backside Dust Guard Plate Assembling

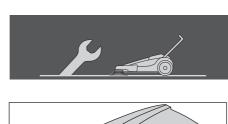

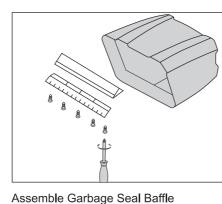

Please Only Process The Above Operations After Reading The Instructions Carefully And Accompanied by professional

Machine failure and damage due to improper use and maintenance Will Not Be Covered By Warranty.

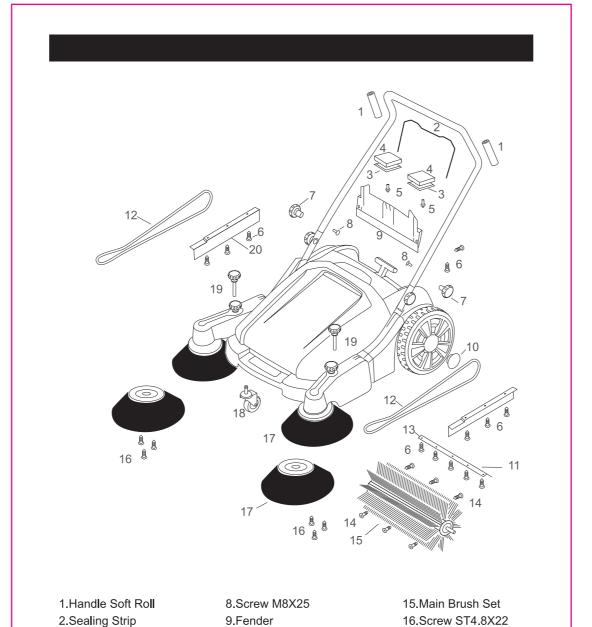

9.Fender 10.Tier Cover

11.Fender

12.Drive Belt

13.Dustproof Sponge

14.Screw ST4.8X32

17.Front Brush

18.Adjust Knob

20.Fender

19.Adjust Knob Set

