


Air Sander Explosive View and Parts list

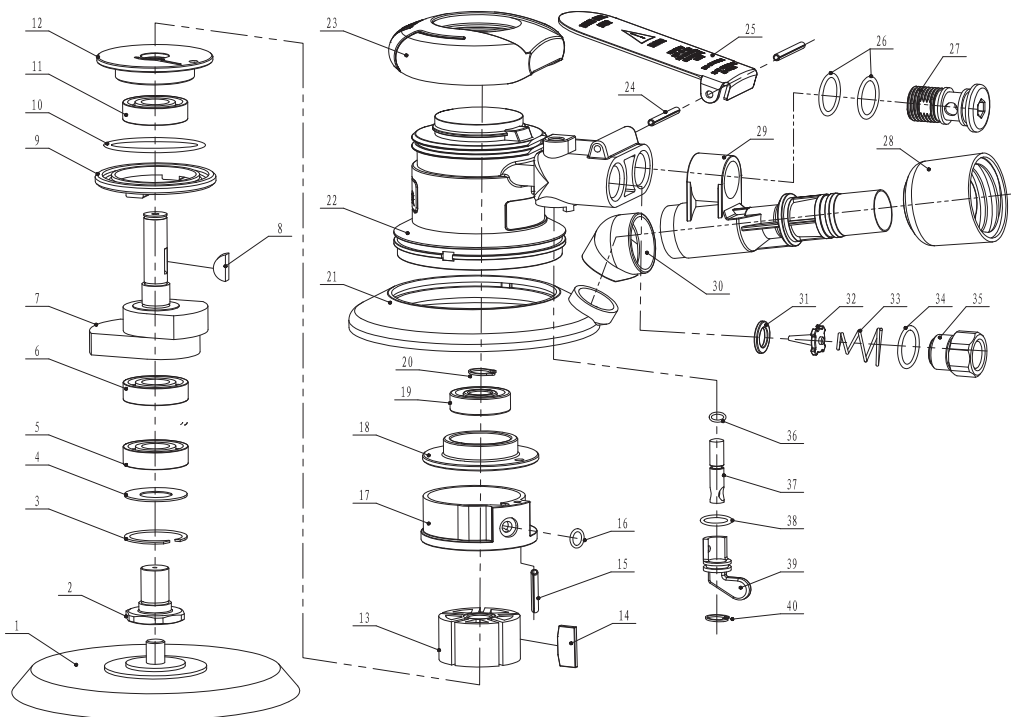

No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.
1	Sanding pad	1	15	Pin 3*28	1	29	Vacuuming straight pipe	1
2	Main Shaft	1	16	O-ring 6*2	1	30	Vacuuming bend pipe	1
3	Retainer ring	1	17	Cylinder	1	31	Switch Plug	1
4	Bearing washer	1	18	Rear cover	1	32	Reverse pin	1
5	Bearing	1	19	Bearing	1	33	Spring	1
6	Bearing	1	20	Retainer ring 10	1	34	O-ring 11.5*1.8	1
7	Drive shaft	1	21	Protective shield	1	35	Air inlet connection	1
8	Woodruff Key	1	22	Housing	1	36	O-ring 4.2*1	1
9	Lock ring	1	23	Housing sheath	1	37	Switch pole	1
10	O-ring 37.5*3.55	1	24	Pin 3*20	2	38	O-ring 8.5*1.5	1
11	Bearing	1	25	Trigger	1	39	Adjust Knob	1
12	Front cover	1	26	O-ring 14*1.6	2	40	Retainer ring 12	1
13	Rotor	1	27	Vacuuming joint	1			
14	Rotor blade	5	28	Locked pipe	1			

Note: If you need spare parts of this model, pls feel free to contact us or the distributor where you bought this tool. Tks!