Polymak®

PM-APS-1.5L AIRLESS PAINT SPRAYER

Motor Power:	1010W
Power Voltage:	220V/50Hz
Flow Rate:	1.5L/minute
Nozzle:	515
Max spraying pressure:	3000psi
Spray hose:	10m/(06.3*12.3
Volume:	39*31.5*41.5(CM)
Weight:	6.21KG
Weight:	9.99KG

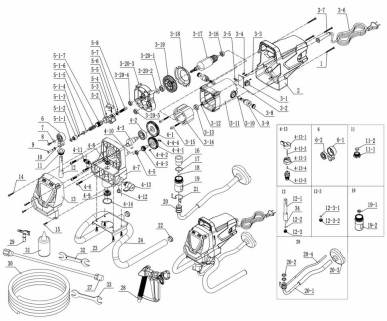

Polymak®

PM-APS-1. 5L SPARE PARTS LIST

No	Parts Name	Pcs	Seri No	INR
1	Screw			
2	Motor out housing			
3	Motor set			
3-1	Switch			
3-2	Circuit board			
3-3	Screw			
3-4	Screw			
3-5	Cable fix			
3-6	Cable			
3-7	Cable cover			
3-8	Carbon brush cover			
3-9	Brush holder			
3-10	Brush			
3-11	Motor inner housing			
3-12	Screw			
3-13	Bearing cover			
3-14	Stator			
3-15	Screw			
3-16	Bearing 608-z			
3-17	Rotor			
3-18	Fan cover			
3-19	Fan			
3-20	Middle cover assembly			
3-20-1	Bearing 6000rs			
3-20-2	Wool mat			
3-20-3	Middle cover			
3-20-4	Bearing 699-z			
3-20-5	Bearing 608-z			
4	Gear box set			
4-1	Big gear			
4-2	Bearing 6004rs			
4-3	Eccentric shaft			
4-4	Small gear set			
4-4-1	Small gear			
4-4-2	Woodruff key			
4-4-3	Small gear shaft			
4-4-4	Φ10			

No	Parts Name	Pcs	Seri No	INR
4-5	Bearing 698-z			
4-6	Screw			
4-7	Gear box			
4-8	Up sealing ring			
4-9	Down sealing ring			
4-10	Spring pin			
4-11	Outlet joint			
4-12	Return pipe connector			
4-13	Return valve assembly			
4-13-1	Knob			
4-13-2	Knob latch			
4-13-3	Knob seat			
4-13-4	Spring pin			
4-13-5	Valve assembly			
5	Pressure adjust valve assembly			
5-1	Pressure valve assembly			
5-1-1	O-ring			
5-1-2	Pressure valve body			
5-1-3	Pressure regulating valve stem O-ring			
5-1-4	Pressure regulating valve seat			
5-1-5	Pressure regulating valve stem			
5-1-6	Pressure regulating spring			
5-1-7	Pressure adjustment knob			
5-2	Pressure valve cover			
5-3	Screw			
5-4	Micro switch			
5-5	Spring			
5-6	Screw			
5-7	Adjustment knob nut			
5-8	Rotary adjustor			
6	Connecting rod set			
6-1	Connecting rod			
6-2	Bearing 6201rs			
7	Gasket			
8	Screw			
9	Plug			
10	Split washer			

Polymak®

PM-APS-1. 5L SPARE PARTS LIST

No	Parts Name	Pcs	Seri No	INR
11	Compression nut assembly			
11-1	Compression nut			
11-2	Plunger rod guide sleeve			
12	Plunger rod set			
12-1	Plunger rod			
12-2	Plunger steel ball			
12-3	Lock screw set			
12-3-1	Plunger seat			
12-3-2	Lock screw			
13	Front face			
14	Screw			
15	Screw			
16	Down suction valve locating sleeve			
17	Down suction valve o ring			
18	Down suction valve steel ball			
19	Down suction valve set			
19-1	Down suction valve seat			
19-2	Down suction body			
20	Suction pipe set			
20-1	Suction pipe			
20-2	O-ring			
20-3	Suction plate			
20-4	Return pipe			
21	Down suction hoop			
22	Foot spigot			
23	Screw			
24	Support b			
27	Extend rod			
28	Spraying gun			
29	Nozzle			
30	High pressure pipe			
31	Lubricating oil			
20-2	O-ring			
32	Spanner			
	Manual			
	Spare parts list			
	Box			

No	Parts Name	Pcs	Seri No	INR
	Packaging foam			
	Label			